


DME DUO PRESS POWER PUMP

Technical specification:

Pressure:	max. 60 bar
Weight:	5 kg
Piston diameter:	piston 1: 16 mm piston 2: 10 mm
Test liquids:	water or oil

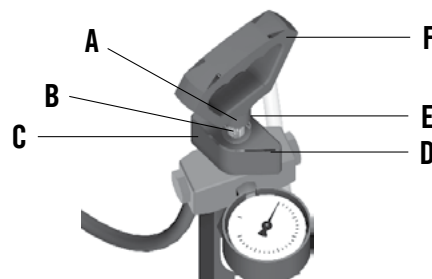

To check a system

1. Connect the coupling nut of the pressure hose to the system that needs to be checked. The system should then be filled with a suitable liquid.
2. Put the transparent suction hose in the liquid to be circulated.
3. Use the handle **F** to push both pistons **A** and **B** down to the stop.
4. Screw down both pistons completely by turning the handle clockwise.
5. Turn the steering unit **C** clockwise until the stop.
6. By turning the handle **F** gently to the left or right, the catch in the large piston is released, it is now possible to pump up to 15 bar.
7. In order to reach higher pressures with less effort, the handle is first pushed down completely, then turned anticlockwise. The catch engages.
8. By turning the handle further to the left both pistons **A** and **B** are separated.
9. It is now possible to reach pressures up to 60 bar effortlessly by pumping through the smallest piston.

To empty the system

1. In order to secure both pistons **A** and **B** together, the handle **F** is pushed down fully and turned clockwise.
2. Continue to turn the handle **F** gently, the pistons are now in the rest position. When the catch **D** engages, a soft click is heard.
3. Turn the steering unit **C** anticlockwise. The pressurised fluid flows through the pump system and suction hose back into the tank.



AT
 P: 0800 301 060
 F: 0800 401 020
dme_oesterreich@milacron.com

BE
 P: +32 (0) 15 28 87 30
 F: +32 (0) 15 40 51 17
dme_benelux@milacron.com

CH
 P: +41 0848 567 364
 F: +41 0848 567 365
dme_schweiz@milacron.com

CZ
 P: 800 142 451 | +420 572 151 754
 F: 800 142 450 | +420 571 611 996
dme_cz@milacron.com


DE
 P: 0800 664 82 50 | +49 (0) 2351 437 0
 F: 0800 664 82 51 | +49 (0) 2351 437 220
dme_normalien@milacron.com

ES
 P: 900 900 342
 F: 900 900 343
dme_iberia@milacron.com

FR
 P: +33 1 49 93 92 23
 F: +33 1 49 93 92 22
dme_france@milacron.com

HU
 P: 06 80 205003
 F: +32 15 40 51 17
dme_hungary@milacron.com

IT
 P: 800 089 734
 F: 800 089 735
dme_italy@milacron.com

NL
 P: +31 (0) 20 654 5571
 F: +31 (0) 20 654 5572
dme_benelux@milacron.com

PL
 P: +800 331 1312 | +32 15 21 50 92
 F: +800 331 1313 | +32 15 40 51 92
dme_polska@milacron.com

PT
 P: 800 207 900
 F: 800 207 901
dme_iberia@milacron.com

SK
 P: 0800 142 451 | +420 572 151 754
 F: 0800 142 450 | +420 571 611 996
dme_cz@milacron.com

UK
 P: +44 2071 3300 37
 F: +44 2071 3300 36
dme_uk@milacron.com

Other Countries
 P: +32 15 28 87 30
 F: +32 15 40 51 17
dme_export@milacron.com